

# TM-074 Digital Photocell Timer Instruction Sheet

Before initial use, please plug your timer for at least 30 minutes to charge the internal battery. After the LCD display appears, your unit will be ready for programming.


## A. Reset:


Press the "RESET" button to reset your timer. This will clear all programmed settings.

## B. LCD Layout:



## C. Button Layout:

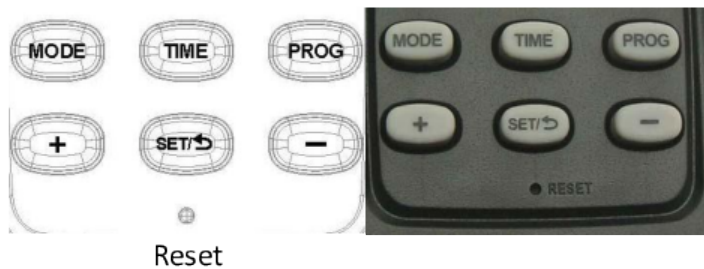

1. **MODE** - Manual Override, Scroll between different modes options
2. **Time** - Press and hold for three seconds to set current time.
3. **PROG** - Press and hold for three seconds to begin setting function.
4.  - Setting confirms and clear setting.
5. **< + >** - To increase time and day setting.
6. **< - >** - To reduce time and day setting.
7. **RESET** - Reset all the functions.

## D. Set Current Time:

1. Press and hold "**TIME**" button for 2 seconds to enter the current time settings, press "+" or "-" button to set the correct day.
2. Press the "**SET**" button to enter the hour setting. Press "+" or "-" buttons to set the current hour. Be sure that AM or PM appears correctly.
3. Press the "**SET**" button to enter the minute setting, Press the "+" or "-" buttons to set the current minute.
4. Press the "**SET**" button to finish setting the current time and return to normal display.
5. While setting those processes above, press and hold "**SET**" button can clear the setting and back to the original timer settings. While setting those processes above, press "TIME" button or wait for 15 seconds to back the standby display.